

Table of Contents

Overview	4	Advanced Techniques	
The Ultra² Sled	6	Dynamic Balancing	40
Stage mechanics and adjustments	8	Inertial Control	42
Stage connectors	9	Lens Height	44
Posts and Clamps	10	Low Mode	48
Monitor Mount	11	Long Mode	52
Smart Motorized Stage	12	Stiffening System	54
The Tilt Head	16	The Ultra² Vest	56
General Operating	17	Fitting the Vest	57
Maintaining Lens Height	18	The G-70 Arm	58
Other Applications	19	Arm Lift Angle	59
Gimbal centering	20	Ride and Lift	60
Base connectors	22	Arm Posts	62
Video Matrix and the Frameline Generator	23	Kick back element	64
Volt/Amp Meter	28	UltraBrite²™ Monitor	66
Artificial Horizon	30	On Screen Display Functions	68
PowerCube batteries and chargers	32	Connectors, Pin-Outs & Jumpers	71
Supplied Accessories	34	Termination Jumper Settings	74
Recommended accessories	35	Tally, FLG, Horizon Features	75
Cases and Packing	35	Specifications & Accessories	76
Basic Set Up		Operating Tips & Warranty	77
Attaching the Camera	36	Appendix	78
Static Balancing	38		

This manual is written for experienced Steadicam operators.

If you are new to Steadicam operating, or if you have never taken an intensive Steadicam workshop, we strongly urge you to take one of our five or six day workshops. For more information on professional workshops worldwide, contact The Tiffen Company.

STEADICAM, UltraBrite, and Ultra² are registered trademarks of the Tiffen company.