


- Add the video cable from the video-out of your camcorder to the video-in of the JR.
- Plug the cable from the "Obie" light into the 6 volt DC out connector of the JR.
- If your camera has a remote pause connector, run the supplied remote pause cable to the pause connector of the JR.
- "Dress" the cables around the camera and through and around the hand-strap so they don't flop around. The Steadicam operates in such fine balance that even a loose cable could cause variations in the trim.

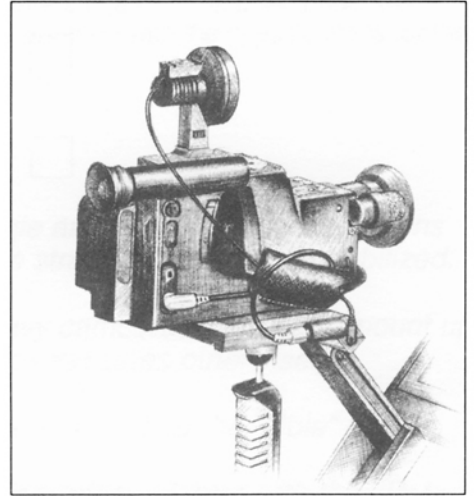

Diag. 17 "Dress" the cables

Now watch Section 7 of the video, "Horizontal and Vertical Trim". Then continue with the manual.